




NEW IDEAS FOR MOTORBIKES

TOURATECH

© March 2026 by:
Touratech GmbH, Germany

Montageanleitung | Mounting instructions | Instructions de montage Istruzioni de montaggio | Instrucciones de montaje

01-034-5505-0 Kardan-Sturzpad für
für BMW R12 G/S, R1200 (-2012), R nineT/ Scrambler/ Urban G/S

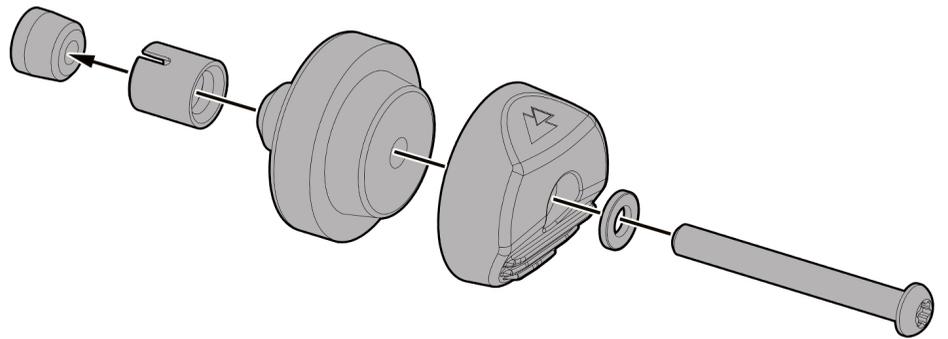

M6x55

